 



A schematic diagram of a cassette deck's internal mechanism. On the left, a circular inset shows a hand using a cotton swab to clean the tape heads. The main diagram shows the tape path with labels for the 'Erase head', 'Record/playback head', 'Cotton swab' (pointing to the heads), 'Capstan', and 'Pinch-roller'.

## Parts Identification

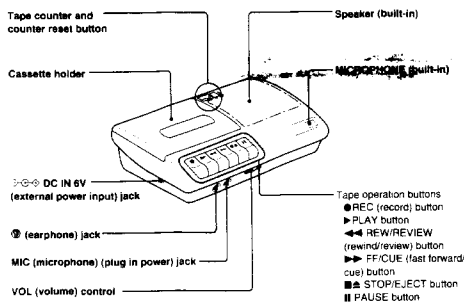

 
## Inserting a Cassette

Take up any slack in the tape before inserting a cassette.

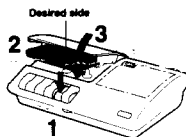

- 1 Press ■ STOP/EJECT to open the cassette holder.
- 2 Insert a cassette into the cassette holder with the side to be recorded or played facing upward.
- 3 Close the cassette holder.


## Playback

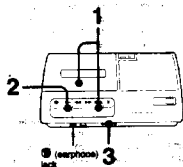 

- 1 Insert a cassette. (See "Inserting a Cassette".)
- 2 Press ► PLAY.
- 3 Adjust the volume with VOL.

To stop playback, press ■ STOP/EJECT.

### Other operations

 

### During playback

To skip undesired section, keep ►► FF/CUE pressed.  
To go back to a certain section, keep ◀◀ REW/REVIEW pressed.  
When the button is released, playback starts again (Cue/review function).

### At the end of the tape

 
All the locked buttons will be automatically released (Full auto shut off mechanism).

### Listening with an earphone


Connect an earphone (not supplied) to the (earphone) jack of the unit. The built-in speaker will be automatically disconnected.

## Power Sources

### House Current




 **Note on the AC power adaptor**  
Use only the supplied AC power adaptor. Do not use any other AC power adaptor.



**Note**  
Make sure that the AC power adaptor is disconnected from the unit when you wish to use the unit with the installed batteries.


### Batteries

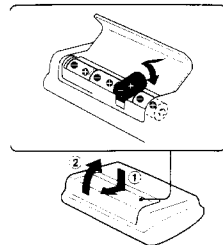 

Insert four size C (R14) batteries (not supplied) with correct polarity.  
Concerning battery life, see "Specifications".

## Recording

 Use only TYPE I (normal) tapes for recording.

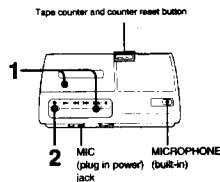

- 1 Insert a cassette. (See "Inserting a Cassette".)
- 2 Press ● REC.  
► PLAY is automatically pressed down as well.


To stop recording, press ■ STOP/EJECT.

### Recording with an external microphone

 Connect an external microphone (not supplied) to the MIC jack of the unit. The built-in microphone is automatically disconnected. When a plug in power type microphone is connected, power will be supplied to the microphone from the unit.

### Preventing accidental erasure

Break off the tab corresponding to the recorded side. Any recording on that side will be protected.

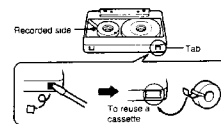

### For indexing the tape contents

Use the tape counter. Before recording, press the counter reset button to set the tape counter to "000". The figure on the tape counter increases during playback, recording and fast-forwarding, and decreases during rewinding.